

QZC1500

INDUSTRIAL HEATER

OWNER'S MANUAL



www.eipl.co.uk



Drawing	: - TPC 367
Issue	: - 4
Date	: - 08/10/12

QZC1500

PACKAGE CONTENTS

Item	Description	Quantity
10962RD-US	Heater	1
TPC367	Manual	1

UNPACKING

Carefully remove the heater from its transit box and visually check for signs of transit damage. If there is evidence of damage DO NOT attempt to operate the unit, call your supplier for advice. Do not discard the packing, it will be useful when transporting the heater in the future.

IMPORTANT – READ ALL SECTIONS BEFORE OPERATING

1. Models are available in 110V or 240V operation. Check that the unit is suitable for the power supply by checking the details on the rating plate. An electric plug of the correct rating is supplied fitted to the unit.
2. Unwind the power cord fully before switching the unit on.
3. Do not operate the unit if there is any visible damage to the casing, power cord or plug.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
5. Warning: In order to avoid overheating, do not cover the heater.
6. Operate the unit on a level surface.
7. The heater must not be located immediately below a socket-outlet.
8. Do not use the heater in the immediate surroundings of a bath, a shower or a swimming pool.
9. Do not remove the covers, if a fault develops return the unit to supplier
10. Do not operate the unit with the safety grilles removed or if the coating on the heating elements is damaged.
11. Children are not to be left unsupervised around the heater.
12. Either one or all three heating elements can be switched on, using the switches on the front of the unit.
13. To switch the unit off, select '0' position on the on / off switch at the front of the unit and disconnect from the power supply.
14. Allow the unit to cool for 10 minutes before handling or repositioning
15. Position the heater at least 2 meters away from the area to be heated and check to ensure overheating does not occur.

16. Never insert anything between the bars of the grille, even when the heater is turned off.
17. Do not use this heater with a programmer, timer, separate remote control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

SPARE PARTS LIST

<u>DESCRIPTION</u>	<u>PART NUMBER</u>
Heating Element	3031620
On / Off Switch	3035914
Power Selection Switch	3036778

Spare parts available online

www.EIPLDIRECT.com