



Drawing	: - TPC 387
Issue	: - 14
Date	: - 21/08/20

**DD900**  
**10520GR-US – 220V / 3PH / 60HZ**

**INDUSTRIAL DEHUMIDIFIER**

**OWNER'S MANUAL**

**[www.eipl.co.uk](http://www.eipl.co.uk)**



Drawing	: - TPC 387
Issue	: - 14
Date	: - 21/08/20

# **DD900**

## **PACKAGE CONTENTS**

Item	Description	Quantity
10520GR-US	Dehumidifier	1
TPC387	Manual	1

## UNPACKING

Carefully remove the DD900 dehumidifier unit from its transit box and visually check for signs of transit damage. If there is evidence of damage DO NOT attempt to operate the unit, call your supplier for advice. Do not discard the packing, it will be useful when transporting the dehumidifier unit in the future.

## INTRODUCTION

Dehumidifiers remove moisture from the air that is circulating through the unit. The resulting reduction of relative humidity helps prevent rust, rot, mould, mildew and condensation within the room, or other enclosed spaces where the dehumidifier is used.

The DD900 is of the desiccant wheel type designed to dry air by passing a large volume of air, the “process” air through a slowly rotating Silica gel rotor. Silica gel is a hygroscopic material that absorbs moisture direct from the air. As the air passes through the rotor the humidity of the air is reduced, whilst the moisture content of the rotor is increased. A smaller volume of air, the reactivation air, is heated by an internal heater and passes through a portion of the rotor in the opposite direction. As this heated air passes through the rotor it will “reactivate” it by removing the moisture content from the silica gel material. The reactivation air will leave the humidifier as warm, moist air and must be vented to outside of the building.

Continuous circulation of the room air through the dehumidifier unit gradually reduces the relative humidity in the room.

The DD900 dehumidifier is a robust, compact unit designed to control the humidity in the enclosed space in which it is placed. The casing is fabricated from Steel then painted and has been designed for the exacting conditions which can prevail in offices, shops, houses, restaurants, public houses etc. It combines lightness and compactness with high reliability and strength

The unit is thermally protected and will automatically switch off in excessive or abnormal conditions.

The dehumidifier has two separate filters. One in the “process” air inlet and one in the “reactivation” air inlet, used to clean the air entering the dehumidifier.




Drawing	: - TPC 387
Issue	: - 14
Date	: - 21/08/20

## SPECIFICATIONS

<b>MODEL:</b>	DD900
<b>HEIGHT:</b>	1219mm (48")
<b>WIDTH:</b>	711mm (28")
<b>DEPTH:</b>	584mm (23")
<b>WEIGHT:</b>	90 Kg (198 lbs)
<b>POWER SUPPLY:</b>	220V, 3 ph, 60Hz
<b>CURRENT:</b>	26A (max)
<b>POWER</b>	9.8 kW (max)
<b>F1 CONTROLS FUSE</b>	2A 250V 5x20 Cartridge fuse
<b>PROCESS AIRFLOW MAXIMUM:</b>	1500m <sup>3</sup> /hr (883 cfm)
<b>PROCESS AIRFLOW NOMINAL:</b>	900m <sup>3</sup> /hr (530 cfm)
<b>REGENERATION AIRFLOW NOMINAL:</b>	250m <sup>3</sup> /hr (147 cfm)
<b>PROCESS AIR OUTLET DIA:</b>	200mm (8")
<b>REGENERATION AIR OUTLET DIA:</b>	150mm (6")
<b>ROTOR WHEEL SPEED:</b>	13.6 (RPH)
<b>ROTOR SIZE DIA X DEPTH:</b>	450mm (17.7") x 100mm (3.9")
<b>HIGH EXTRACTION SETTING @ 27°C 60% RH:</b>	172 l/day (364 ppd)
<b>HIGH EFFICIENCY SETTING @ 27°C 60% RH:</b>	135 l/day (286 ppd)
<b>DEEP DRYING SETTING @ 27°C 60% RH:</b>	153 l/day (323 ppd)
<b>TYPICAL DRY AIR OFF HIGH EXTRACTION SETTING (%RH)</b>	12
<b>TYPICAL DRY AIR OFF HIGH EFFICIENCY SETTING (%RH)</b>	14
<b>TYPICAL DRY AIR OFF DEEP DRYING SETTING (%RH)</b>	6
<b>MINIMUM OPERATING TEMPERATURE:</b>	-20°C (-4°F)
<b>MAXIMUM OPERATING TEMPERATURE</b>	40°C (104°F)

## UNIT CAPACITY

The ambient conditions of the area to be dehumidified will determine the amount of water extraction the unit is cable of.  
Measure the ambient conditions of the area to be determined and then use that information with the following capacity diagram to determine the unit capacity.

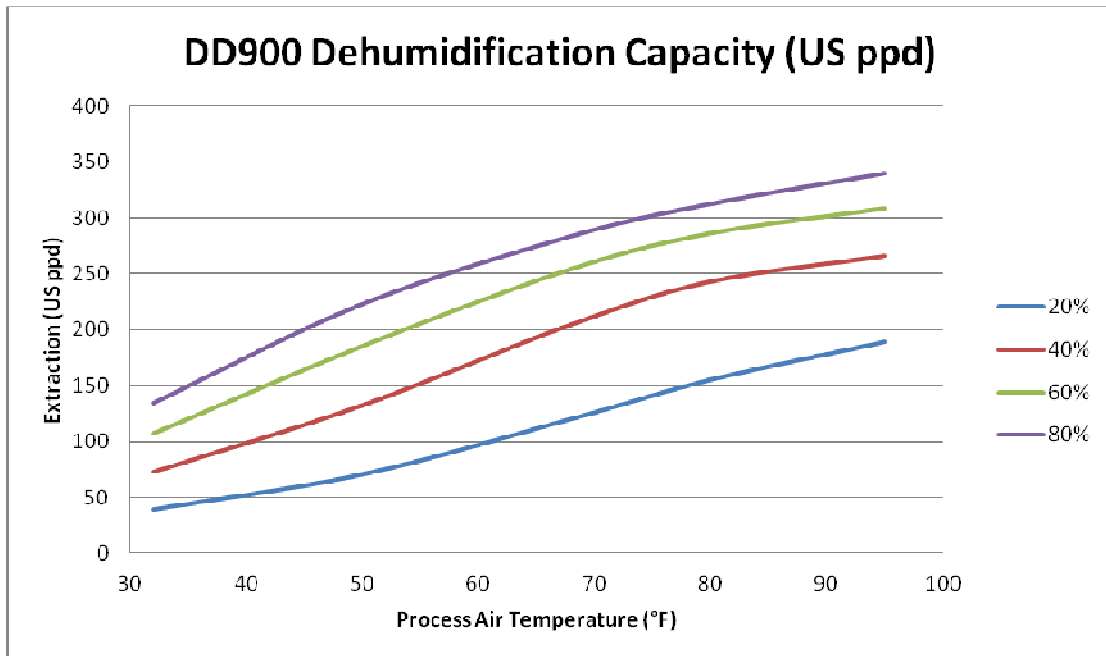

## INSTALLATION

The DD900 is designed for indoor use. The unit should be placed on a level surface and a space of 3 ft free around all faces to allow access for any duct work and servicing.

### Connecting duct work:

The regeneration outlet must be ducted to outside the area being dehumidified. The outlet duct spigot is 6" diameter and only 6" ducting or greater should be attached.

The process outlet can be ducted to a specific area or another room. The outlet duct spigot is 8" diameter and only 8" ducting or greater should be attached.


### Power Supply & Humidistat Control:

The unit must be connected to a suitable 220V, 3 phase, 60Hz supply.

**-WARNING-**  
THIS APPLIANCE MUST BE EARTHED

Feed power cables through the gland provided and then wire the unit as shown below.

An external humidistat can also be used to control the relative humidity in the dehumidified area. If a humidistat is used then the wires should pass through the gland provided and then wired as shown in the diagram at the back of this manual.

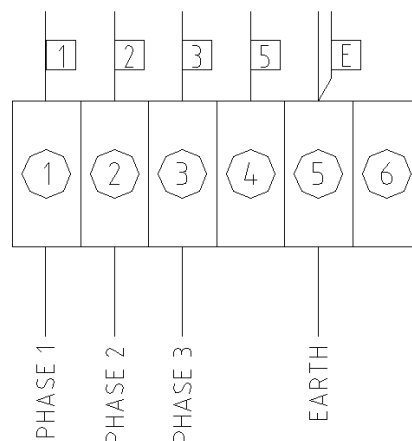

## Control Settings

Once the unit is positioned correctly, required duct work attached and the power supply connected, the fan speeds and temperature control need to be set correctly.

The fan speed controls are located behind a removable cover, to the right of the main controls. The controls are numbered 1 to 10, with 10 being the maximum speed.

The temperature control regulates the temperature of the reactivation airflow onto the desiccant wheel. The control can be set up to a maximum of 293°F (145°C).

To adjust the temperature control simply press the 'SET' button and then select the required setting by using the ▲ or ▼ buttons. To confirm press the ✓ button and the value is stored. The display will revert back to the current temperature.

To change the temperature displayed between °C and °F carry out the following:

Press and hold the button 'SET P'

Display will show 'C-F'

Press the ✓ button to confirm

Using the ▲ or ▼ buttons change the value to 0 or 1 (0 - °C / 1 - °F)

Press the ✓ button to confirm

The controller will revert back to normal operation after 20 seconds. The selected temperature unit is displayed at the top of the screen.

For normal (efficient) operation the process airflow should be set to 412cfm, and the regeneration airflow set to 94. Measurements should be taken at the duct outlets using a suitable instrument.

The temperature setting should be set to 194°F (90°C) above the ambient temperature of the area being dehumidified


If high moisture extraction is required it will be necessary to increase both the process and regeneration airflows. The temperature control setting should also be increased.

If very low humidity levels are required then the process airflow should be reduced.

The following table should be used as a guide:


	<b>PROCESS AIR FLOW M<sup>3</sup>/H / CFM</b>	<b>REGEN AIR FLOW M<sup>3</sup>/H / CFM</b>	<b>TEMPERATURE RISE (°F)</b>	<b>TEMPERATURE RISE (°C)</b>
<b>STANDARD (EFFICIENT)</b>	900 / 530	250 / 147	194	90
<b>HIGH EXTRACTION</b>	1100 / 647	350 / 206	230	110
<b>DEEP DRYING (LOW RH)</b>	700 / 412	350 / 206	230	110

## FAN PERFORMANCE CURVES

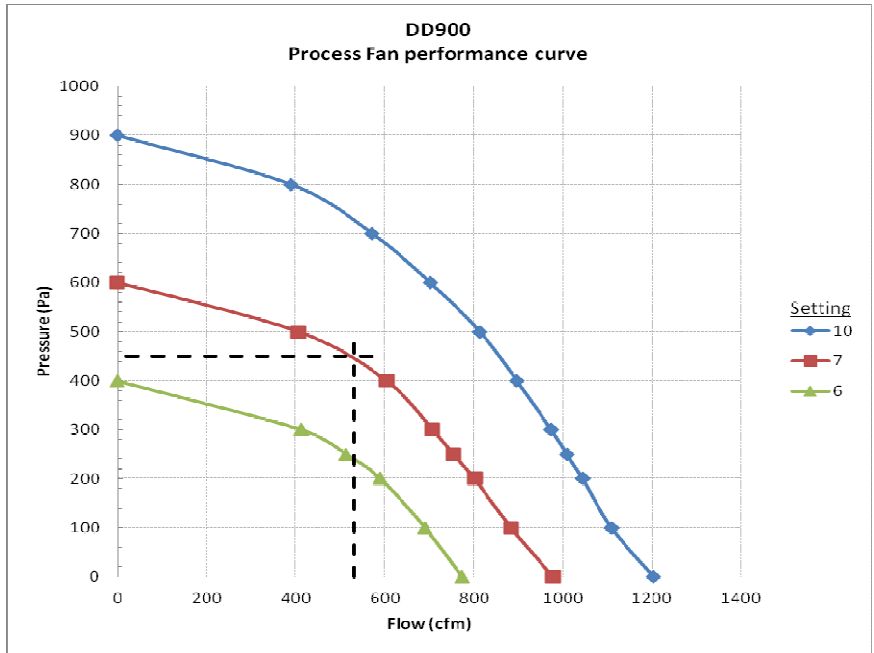

For example:

If the total system resistance is 450pa then the process fan selector would have to be set to No 7 to achieve the required airflow of 530 cfm

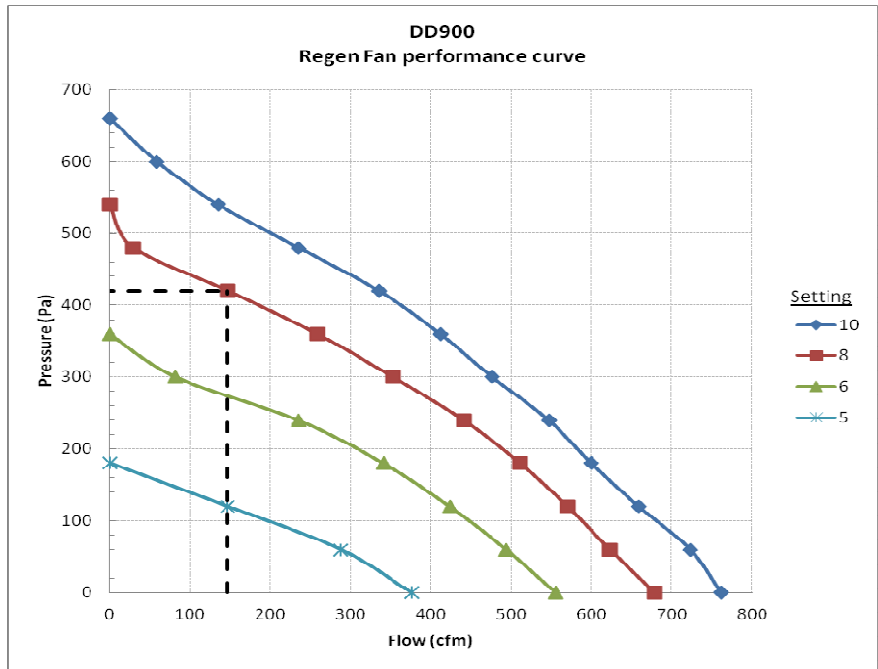

For example:

If the total system resistance is 420pa then the regen fan selector would have to be set to No 8 to achieve the required airflow of 147 cfm



## OPERATION

The electrical controls are located on the front of the unit. They are:

- On / Off Switch

<b>M</b>	Dehumidifier in continuous operation
<b>A</b>	Dehumidifier operation by means of an external humidistat
<b>0</b>	Dehumidifier OFF

- An hour counter is provided to display the total time the unit has been in operation
- DRYING lamp – unit is in drying mode.
- HEATING lamp – indicates heating elements are on. Cycle on/off when in drying mode.
- FAULT lamp – unit has a fault

To start the dehumidifier, turn the On / Off switch to position M.

After a slight delay the fans will operate – air can be felt blowing from the air outlets and the heater will come on.

The unit will operate continuously at this setting.

If an external humidistat control is fitted, turn the unit to switch to position A. Depending on the setting of the humidistat, the dehumidifier may switch off as the relative humidity in the room decreases. As the humidity increase the unit will automatically switch back on.

### High Temperature Cut-Out:

The DD900 dehumidifier has been designed to work in ambient conditions of -4°F to +104°F. Should the temperature in the room become excessive a manual overheat protector will operate, switching off the heaters. The fans and drive motor will continue to operate but the fault lamp will illuminate. Prior to resetting the protector, check that the dehumidifier is installed correctly and the ambient temperature does not exceed 104°F.

See repairs section for details on resetting device.

## SAFETY

### **-WARNING-**

- ◆ **DO NOT** ALLOW CHILDREN TO PLAY WITH OR AROUND THE UNIT. ENSURE THE UNIT IS INACCESSIBLE TO CHILDREN WHEN NOT ATTENDED.
- ◆ **DO NOT** USE THIS UNIT IN AN ENVIRONMENT CONTAINING FLAMMABLE FUMES
- ◆ **DO NOT** USE THIS UNIT IF THE CABINET OR POWER CORD IS DAMAGED
- ◆ **DO NOT** INSERT OBJECTS INTO ANY OF THE GRILLES ON THE MACHINE
- ◆ **DO NOT** COVER OR OBSTRUCT AIRFLOW FROM THE GRILLES
- ◆ **DO NOT** OPERATE THE UNIT WITH THE COVERS REMOVED
- ◆ **DO NOT** ATTEMPT ANY REPAIRS SHOULD THE UNIT FAIL TO OPERATE
- ◆ **DO NOT** STAND ON THE UNIT
- ◆ **DO NOT** LIFT THE UNIT WHEN SWITCHED ON
- ◆ **DO** CHECK THE PLUG ON THE EQUIPMENT MATCHES THE SUPPLY
- ◆ **DO** USE THE UNIT FOR THE PURPOSE FOR WHICH IT WAS DESIGNED
- ◆ **DO** ENSURE THE POWER CORD AND SUPPLY IS EARTHED CORRECTLY
- ◆ **DO** USE A RESIDUAL CURRENT DEVICE “RCD” WHERE POSSIBLE
- ◆ **DO** KEEP THE UNIT DRY. NEVER USE A HOSE OR PRESSURE WASHER TO CLEAN THE UNIT.

## ROUTINE SERVICE & REPAIR

**WARNING:**

ENSURE THAT THE POWER CORD TO THE MACHINE HAS BEEN DISCONNECTED BEFORE CARRYING OUT ROUTINE SERVICE. THE SERVICING AND REPAIR OF THIS UNIT SHOULD ONLY BE CARRIED OUT BY A SUITABLY QUALIFIED PERSON.

SWITCH OFF THE DEHUMIDIFIER APPROXIMATELY 15 MINUTES PRIOR TO REMOVING ANY PANELS, ALLOWING THE HEATER TO COOL DOWN

To ensure continued full efficiency of the dehumidifier, maintenance procedures should be performed as follows:

- We recommend that the filters are checked at least once a month. Intervals for cleaning or replacement of filters will depend on the installation
- Never operate the dehumidifier without the filters, as the rotor can be damaged by dust.

To carryout the following, it is necessary to remove the side panels.

This machine should be serviced by qualified Ebac Industrial Products Ltd personnel or other persons having technical competence in servicing electrical equipment following the instructions in this Service Manual.

- The rotor is maintenance free. However, should it be necessary to clean the rotor, compressed air should be used to carefully blow dirt from the rotor.
- The heaters are maintenance free. However should it be necessary to clean the heaters, compressed air should be used to carefully blow dirt from the heaters.
- Check that the fans are firmly secured and that the fan rotates freely.
- Check all wiring connections.
- Check the belt tensioning at regular intervals.
- The overheat protector is located inside the unit, below the desiccant wheel. To reset this device press the red button.
- Should an electrical component fail, consult the Factory Service Center to obtain the proper replacement part.



Drawing	: - TPC 387
Issue	: - 14
Date	: - 21/08/20

**IF ANY OF THE PRECEDING PROBLEMS OCCUR, CONTACT THE EBAC INDUSTRIAL PRODUCTS LTD SERVICE CENTER PRIOR TO CONTINUED OPERATION OF THE UNIT TO PREVENT PERMANENT DAMAGE.**

## TROUBLESHOOTING

<u>SYMPTOM</u>	<u>CAUSE</u>	<u>REMEDY</u>
<b>Little or no dehumidification capacity</b>	Filter clogged No regeneration heat Reduced airflow No rotation of Rotor Air leakage	Clean or replace filters Check Heaters / OHP Check fans / duct Check belt tension / drive motor Check sealing
<b>Dehumidifier does not start</b>	No power Correct switch setting Loose electrical wiring	Check fuse Check Auto / Manual switch Check wiring diagram - fault find & repair
<b>Rotor does not rotate</b>	Drive belt slipping Drive belt broken Rotor jammed Drive motor faulty	Check belt tension Replace drive belt Check centre shaft, rim of rotor Check supply /Replace motor
<b>No Dry or Wet Air Airflow</b>	Filter clogged Fan faulty Ducts blocked	Clean or replace filters Check supply / fan Check duct for obstruction
<b>Noisy</b>	Fan loose Loose fastenings	Check fans secured firmly Tighten all fastenings



Drawing	: - TPC 387
Issue	: - 14
Date	: - 21/08/20

## **WARNINGS**

This appliance can be used by children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the application in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the SUPPLY CORD is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid hazard.



Drawing	: - TPC 387
Issue	: - 14
Date	: - 21/08/20




Drawing	: - TPC 387
Issue	: - 14
Date	: - 21/08/20








Drawing	: - TPC 387
Issue	: - 14
Date	: - 21/08/20



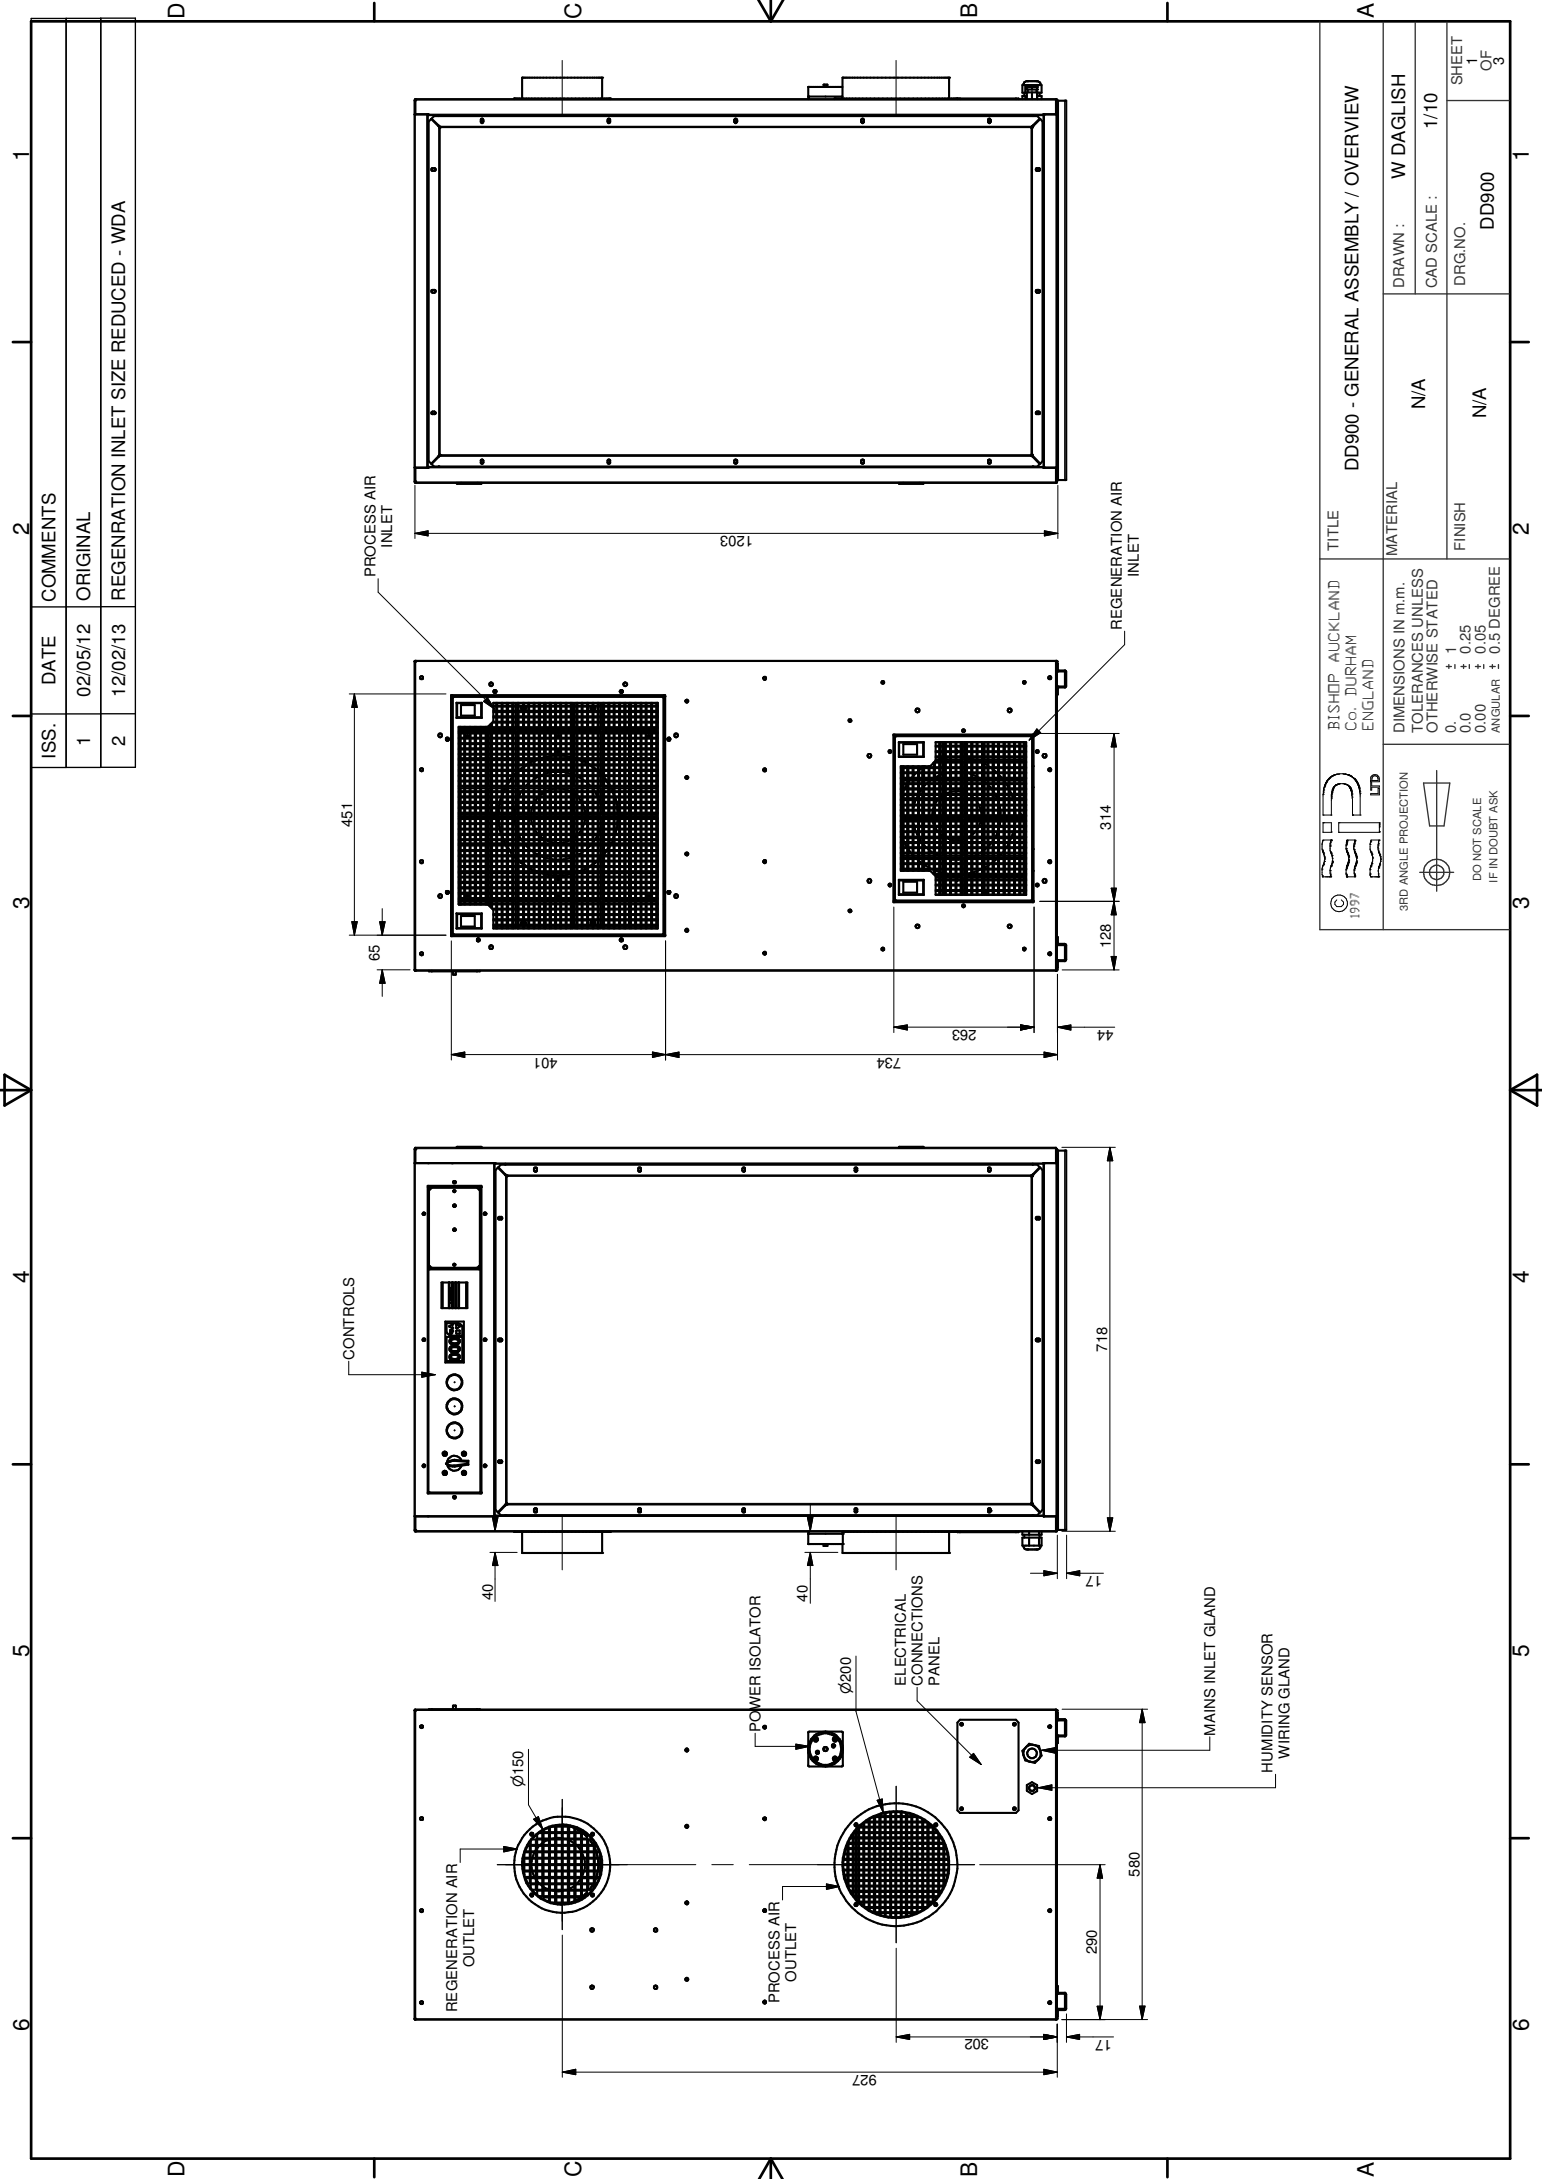


ISS.	DATE	COMMENTS
1	02/05/12	ORIGINAL
2	12/02/13	REGENERATION INLET SIZE REDUCED - WDA

BISHOP AUCKLAND Co. DURHAM ENGLAND		DD900 - GENERAL ASSEMBLY / OVERVIEW	
DIMENSIONS IN m.m. TOLERANCES UNLESS OTHERWISE STATED		MATERIAL	N/A
0	+ 1	FINISH	N/A
0.0	+ 0.25		
0.00	+ 0.05		
ANGULAR	+ 0.5 DEGREE		
3RD ANGLE PROJECTION		TITLE	DD900 - GENERAL ASSEMBLY / OVERVIEW
DO NOT SCALE IF IN DOUBT ASK		DRAWN :	W DAGLISH
		CAD SCALE :	1/10
		DRG.NO.	DD900
		SHEET	1
		OF	3

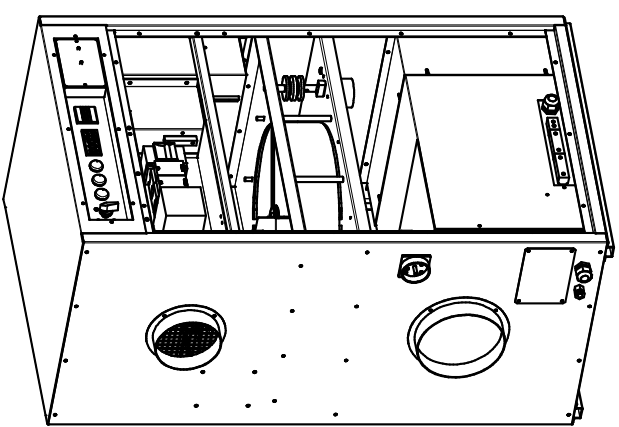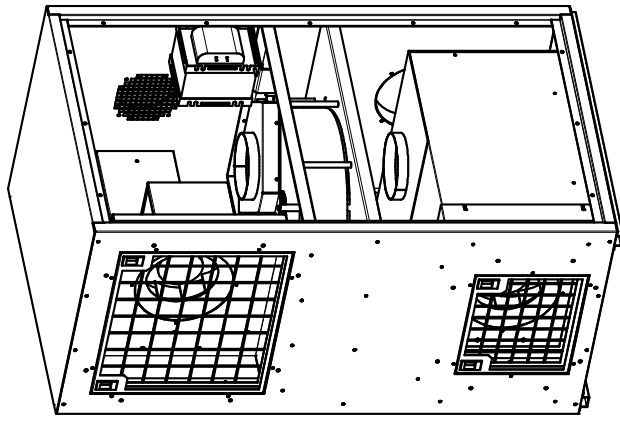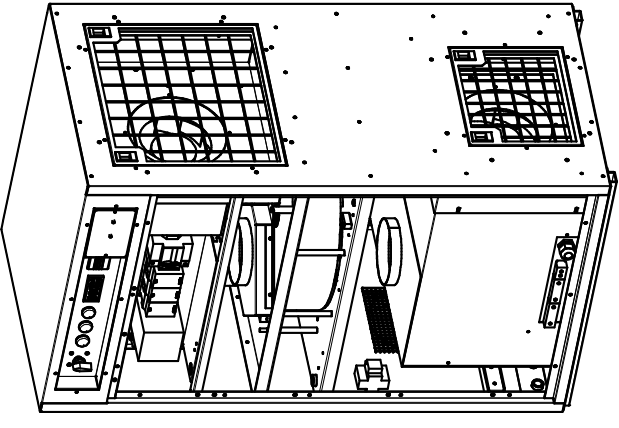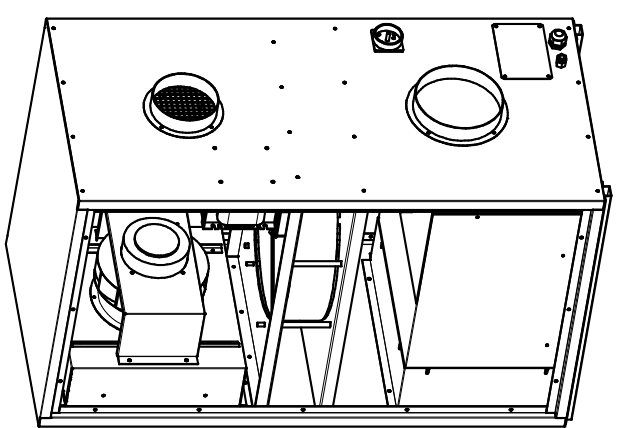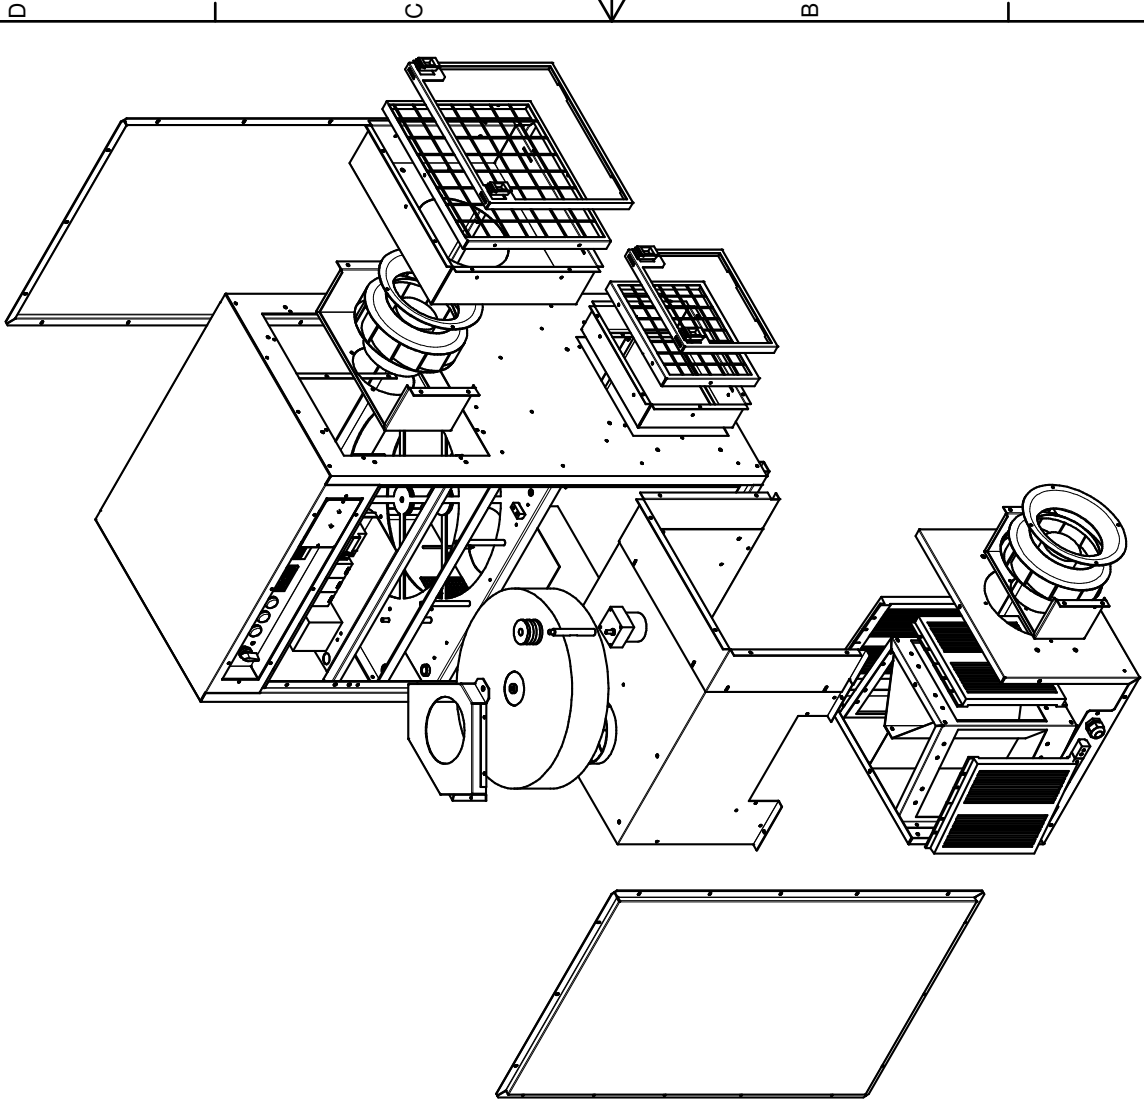



ISS.	DATE	COMMENTS
1	02/05/12	ORIGINAL
2	12/02/13	REGENERATION INLET SIZE REDUCED - WDA

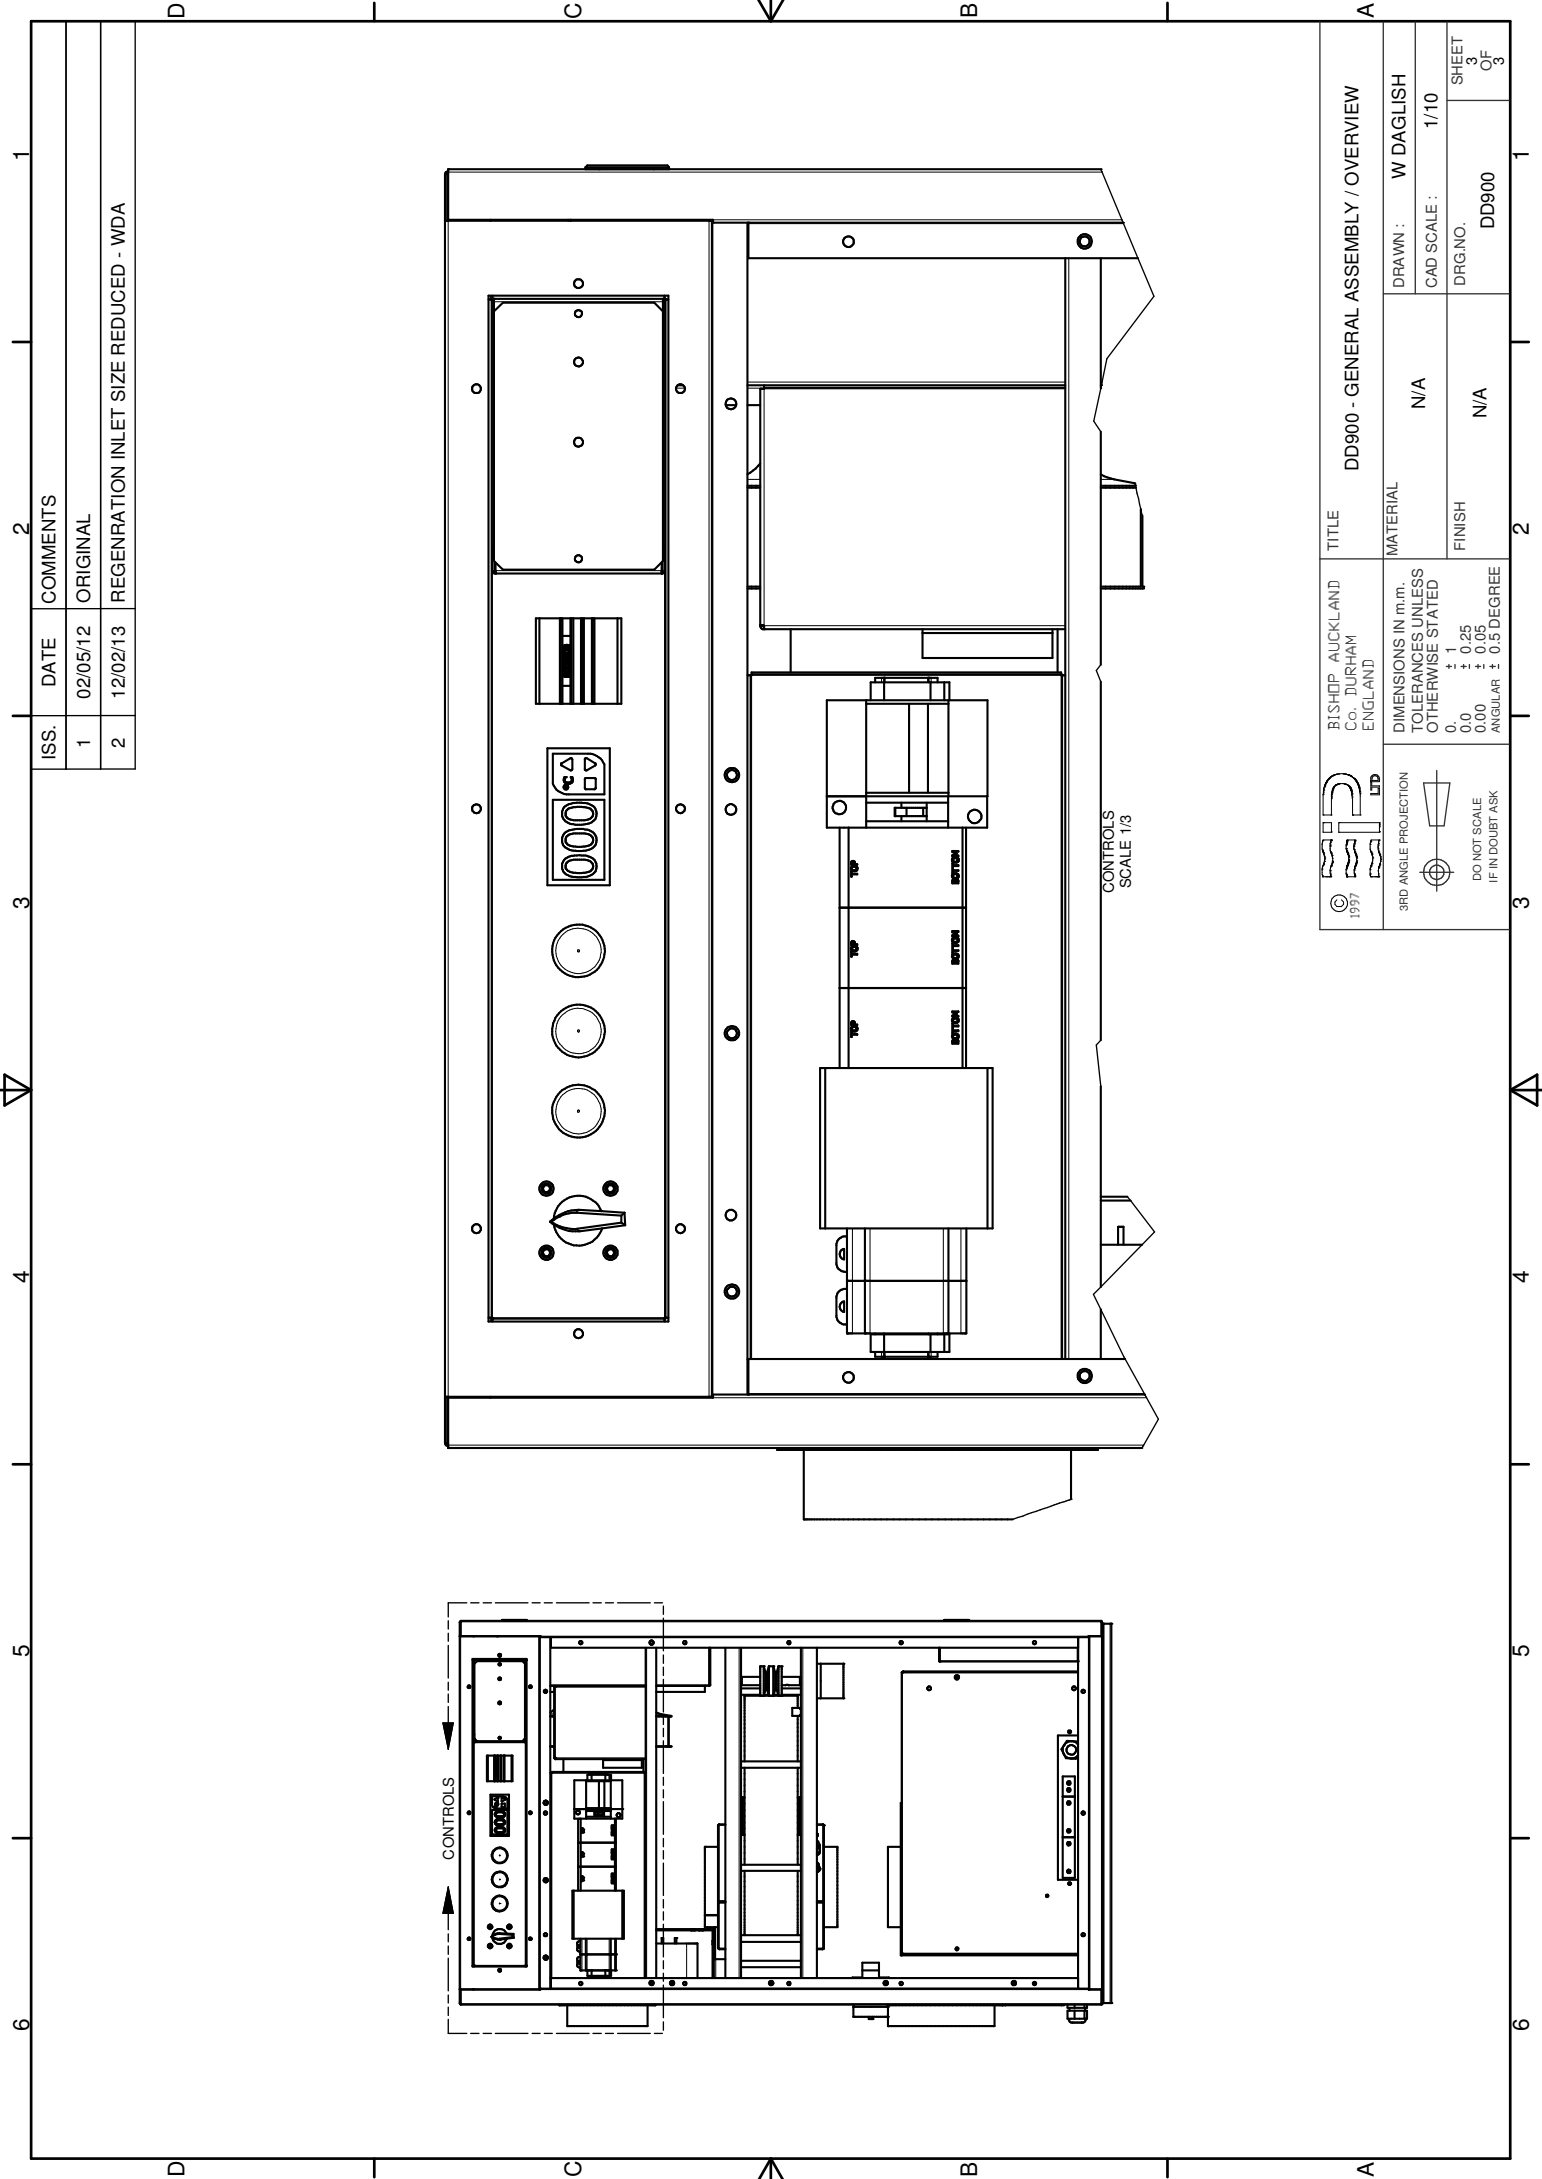BISHOP AUCKLAND Co. DURHAM ENGLAND		DD900 - GENERAL ASSEMBLY / OVERVIEW	
DIMENSIONS IN m.m. TOLERANCES UNLESS OTHERWISE STATED		MATERIAL	N/A
0	+ 1	FINISH	N/A
0.0	+ 0.25	DRG.NO.	DD900
0.00	+ 0.05	DRAWN :	W DAGLISH
ANGULAR ± 0.5 DEGREE		CAD SCALE :	1/12
3RD ANGLE PROJECTION		DO NOT SCALE IF IN DOUBT ASK	SHEET 01 03




ISS.	DATE	COMMENTS
1	02/05/12	ORIGINAL
2	12/02/13	REGENERATION INLET SIZE REDUCED - WDA

 © 1997 BISHOP AUCKLAND Co. DURHAM ENGLAND	TITLE	DD900 - GENERAL ASSEMBLY / OVERVIEW
	MATERIAL	N/A
DIMENSIONS IN m.m. TOLERANCES UNLESS OTHERWISE STATED 0 ± 1 0.0 ± 0.25 0.00 ± 0.05 ANGULAR ± 0.5 DEGREE	DRAWN :	W DAGLISH
	CAD SCALE :	1/10
3RD ANGLE PROJECTION  DO NOT SCALE IF IN DOUBT ASK	FINISH	N/A
	DRG.NO.	DD900
	SHEET	3

CONTROLS  
SCALE 1/3

ISSUE	DATE	AMENDMENTS
4	13/03/13	HEATERS PREVIOUSLY WIRED STAR - WDA
5	13/02/14	REGEN OHP ADDED - WDA
6	28/04/14	OHP'S CORRECTED - WDA
7	13/07/20	WIRE COLOUR / SIZE UPDATE - WDA
8	24/08/20	OHP ID TABLE ADDED - WDA




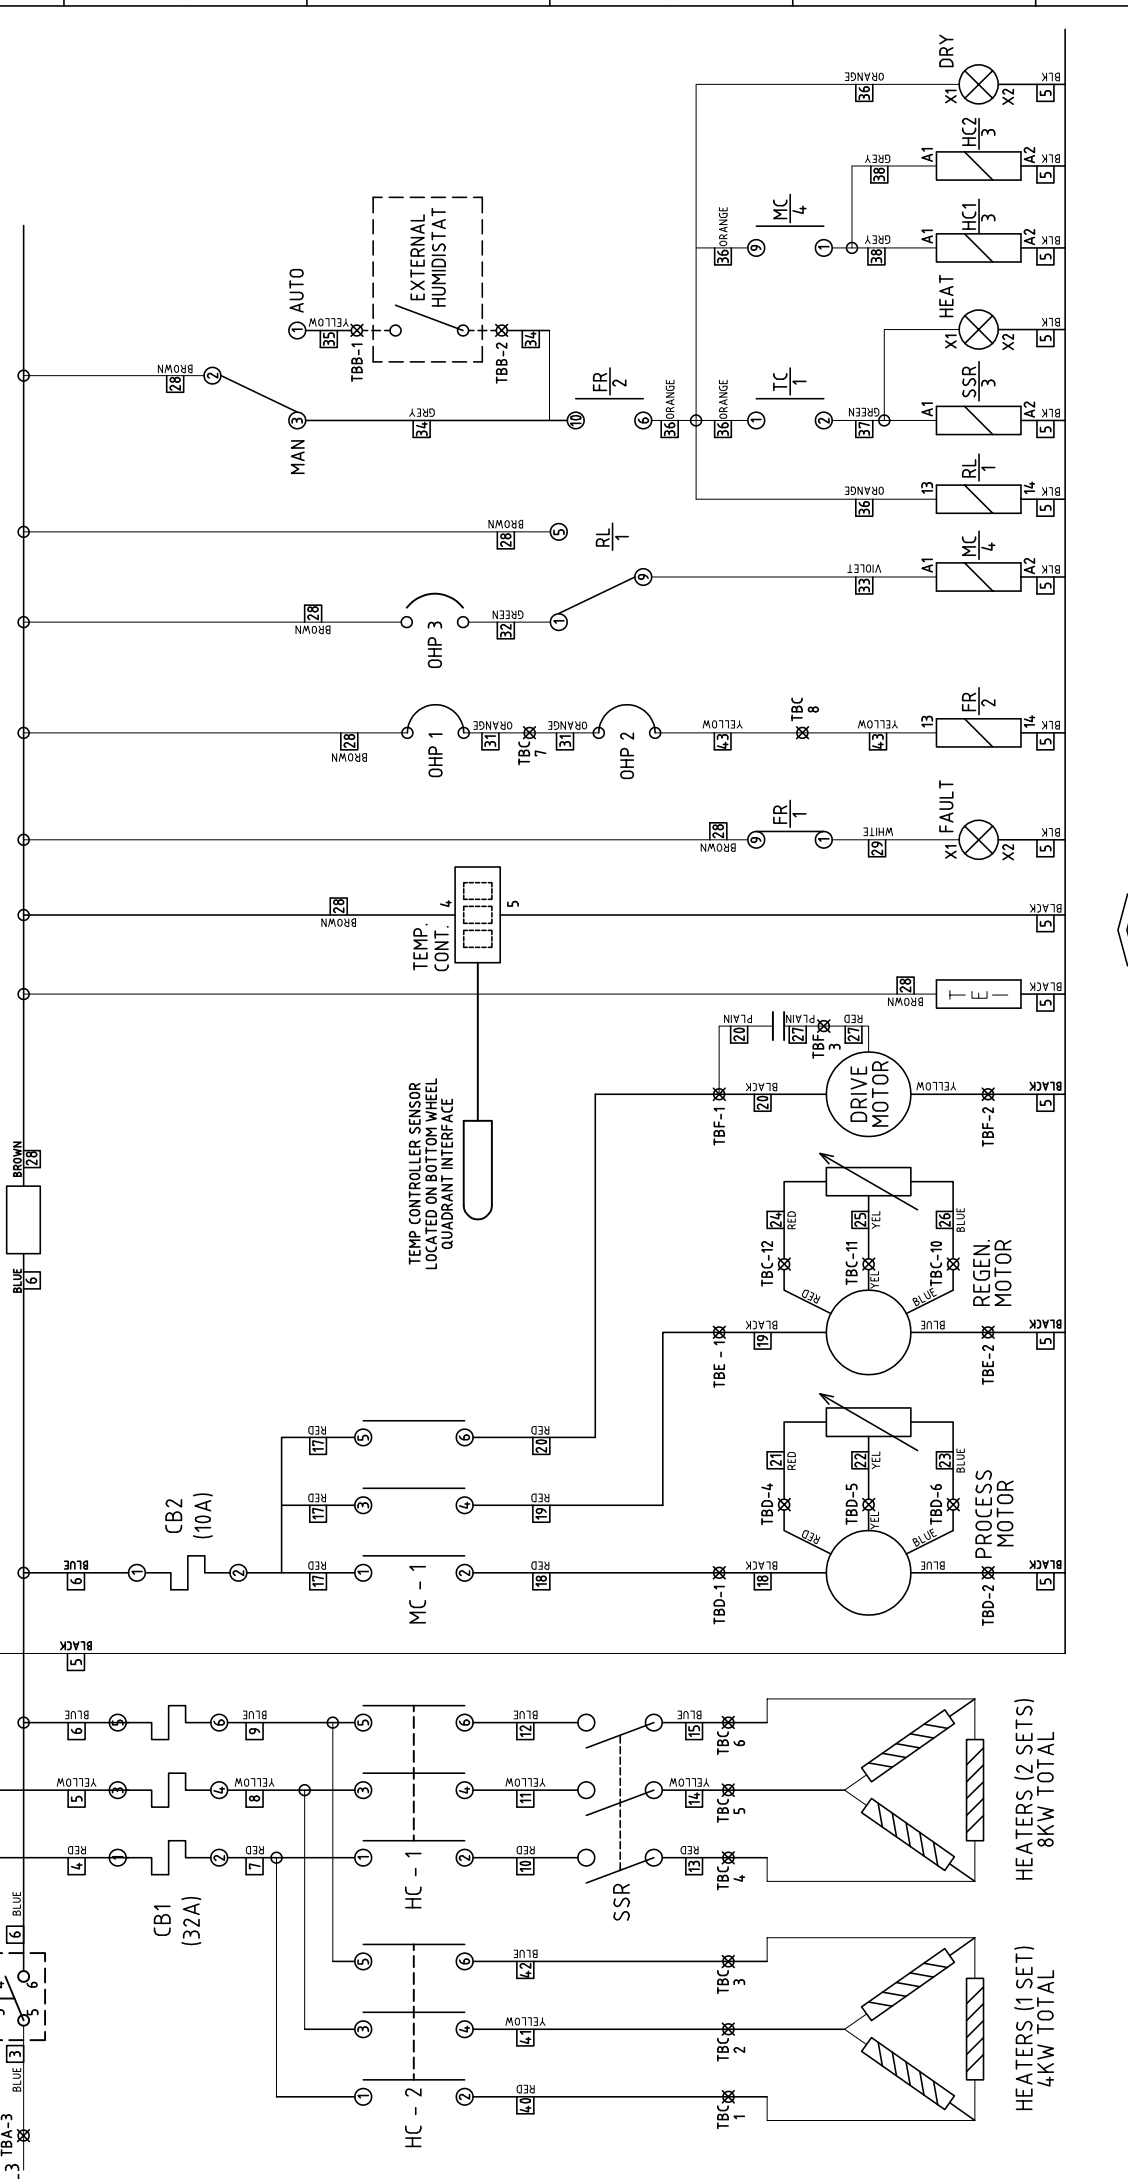


**EBAC**  
LIMITED  
RISHIP, AUCKLAND  
ENGLAND

<b>TITLE</b>	DD900 - 220V/60Hz 3PH - WIRING SCHEMATIC		
<b>MATERIAL</b>	N/A	<b>DRAWN :</b>	W DAGLISH
<b>3RD ANGLE PROJECTION</b>		<b>CAD SCALE :</b>	N/A
<b>DO NOT SCALE IF IN DOUBT ASK</b>		<b>FINISH</b>	N/A
<b>DIMENSIONS IN m.m. TOLERANCES UNLESS OTHERWISE STATED</b>	0.0 ± 0.25	<b>DRG.NO.</b>	5020324
0.00 ± 0.05	ANGULAR ± 0.5 DEGREE	<b>SHEET</b>	1 OF 1

COMPONENT	IDENTIFICATION	LOCATION	SWITCH STATUS	SWITCH POINT
OHP 1	REGENERATION AIR ON	BOTTOM WHEEL QUADRANT INTERFACE	N/C	OPEN @ 130°C
OHP 2	REGENERATION MOTOR PROTECTION	HEATER CHAMBER MOTOR HEAT SHIELD	N/C	OPEN @ 70°C
OHP 3	FAN RUN ON	BOTTOM WHEEL QUADRANT INTERFACE	N/O	CLOSES @ 70°C

ISSUE	DATE	AMENDMENTS
11	01/05/15	CONTROL BOX VIEW CHANGED - WDA
12	12/05/15	CONTROL BOX VIEW CHANGED - WDA
13	06/11/15	REGEN FAN T/B VIEW UPDATED - WDA
14	18/05/18	DRYING LAMP WIRE QTY UPDATED - WDA
15	13/07/20	WIRE COLOUR / SIZE CHANGE - WDA

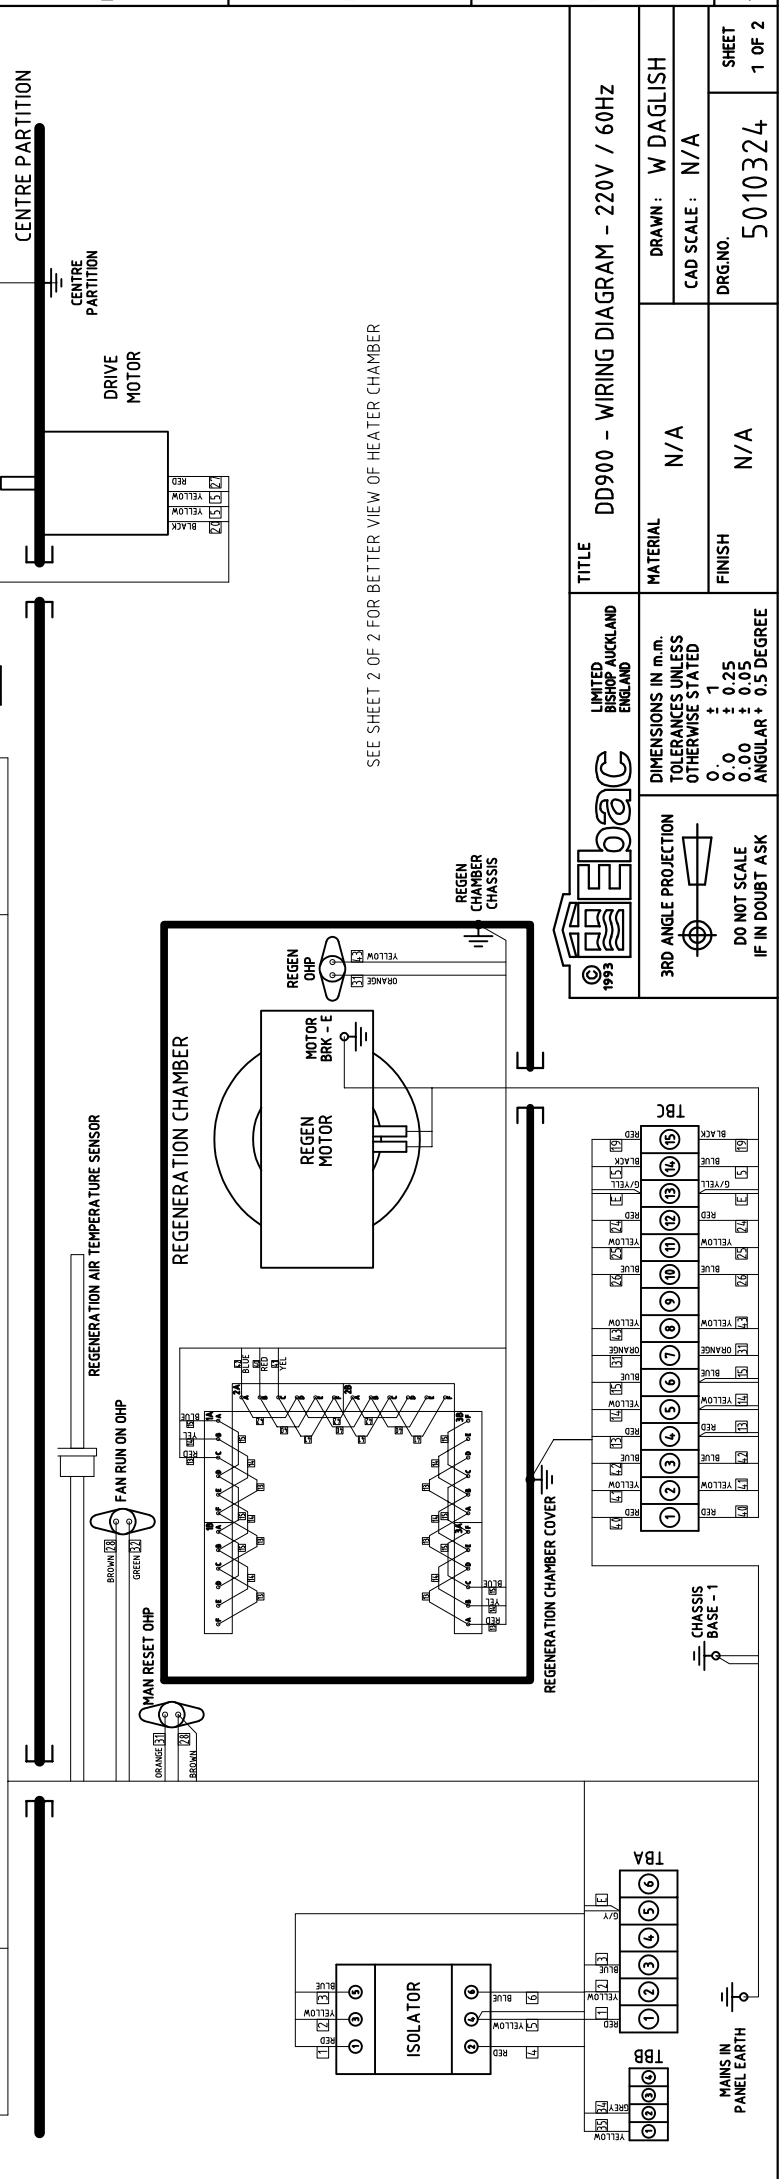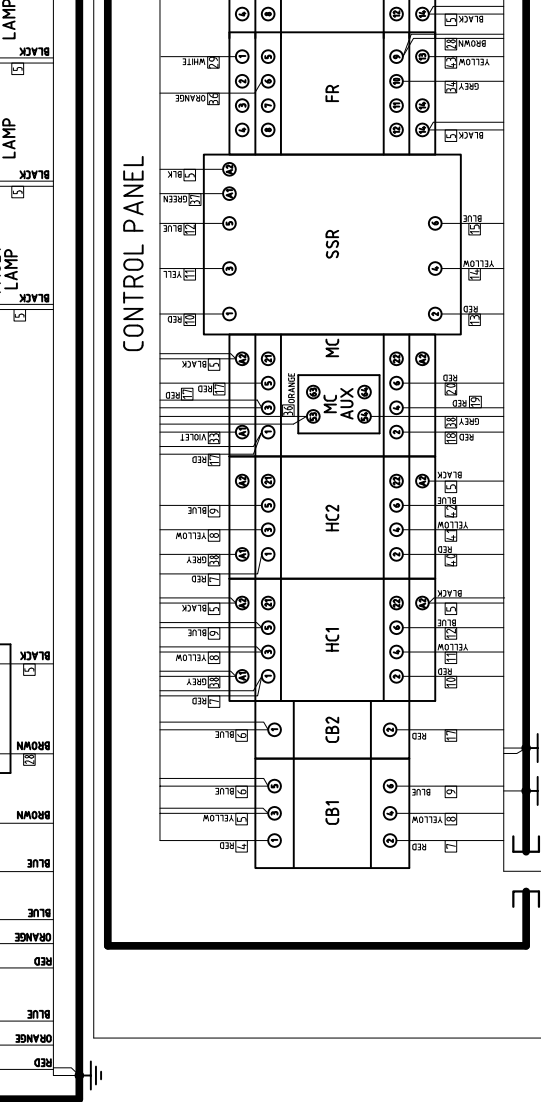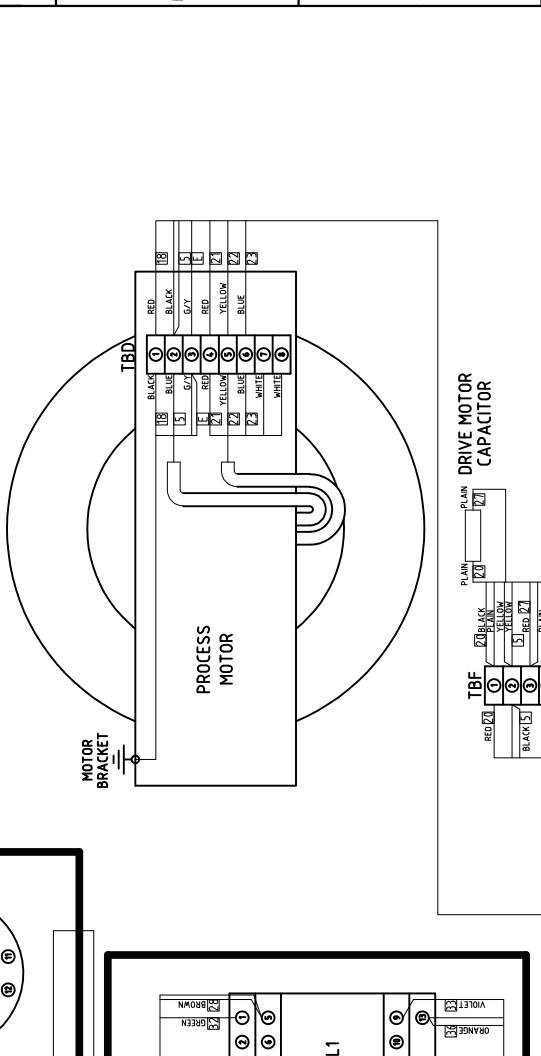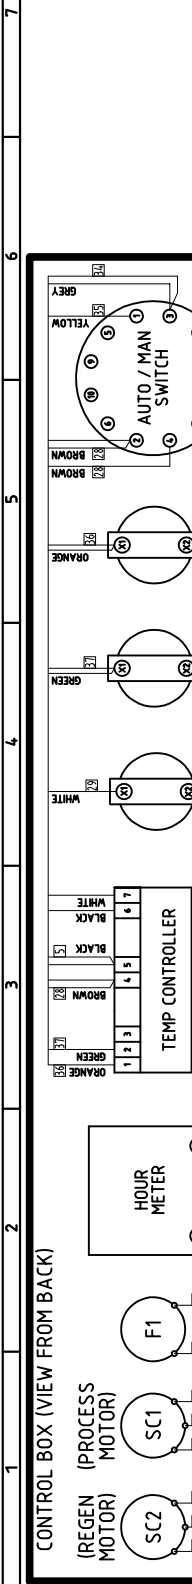

SEE SHEET 2 OF 2 FOR BETTER VIEW OF HEATER CHAMBER

1993

3RD ANGLE PROJECTION

DO NOT SCALE IF IN DOUBT ASK

DIMENSIONS IN m.m. TOLERANCES UNLESS OTHERWISE STATED

0.0 ± 0.25

0.00 ± 0.05

ANGULAR ± 0.5 DEGREE

LIMITED RISK AUSTRALIA ENGLAND

TITLE DD900 - WIRING DIAGRAM - 220V / 60HZ

MATERIAL N/A

FINISH N/A

DRAWN: W DAGLISH

CAD SCALE: N/A

DRG.NO. 5010324

SHEET 1 OF 2


ISSUE	DATE	AMENDMENTS
11	01/05/15	CONTROL BOX VIEW CHANGED - WDA
12	12/05/15	CONTROL BOX VIEW CHANGED - WDA
13	06/11/15	REGEN FAN T/B VIEW UPDATED - WDA
14	18/05/18	DRYING LAMP WIRE QTY UPDATED - WDA
15	13/07/20	WIRE COLOUR / SIZE CHANGE - WDA


ISSUE	DATE	AMENDMENTS
11	01/05/15	CONTROL BOX VIEW CHANGED - WDA
12	12/05/15	CONTROL BOX VIEW CHANGED - WDA
13	06/11/15	REGEN FAN T/B VIEW UPDATED - WDA
14	18/05/18	DRYING LAMP WIRE QTY UPDATED - WDA
15	13/07/20	WIRE COLOUR / SIZE CHANGE - WDA

ISSUE	DATE	AMENDMENTS
11	01/05/15	CONTROL BOX VIEW CHANGED - WDA
12	12/05/15	CONTROL BOX VIEW CHANGED - WDA
13	06/11/15	REGEN FAN T/B VIEW UPDATED - WDA
14	18/05/18	DRYING LAMP WIRE QTY UPDATED - WDA
15	13/07/20	WIRE COLOUR / SIZE CHANGE - WDA

ISSUE	DATE	AMENDMENTS
11	01/05/15	CONTROL BOX VIEW CHANGED - WDA
12	12/05/15	CONTROL BOX VIEW CHANGED - WDA
13	06/11/15	REGEN FAN T/B VIEW UPDATED - WDA
14	18/05/18	DRYING LAMP WIRE QTY UPDATED - WDA
15	13/07/20	WIRE COLOUR / SIZE CHANGE - WDA

ISSUE	DATE	AMENDMENTS
11	01/05/15	CONTROL BOX VIEW CHANGED - WDA
12	12/05/15	CONTROL BOX VIEW CHANGED - WDA
13	06/11/15	REGEN FAN T/B VIEW UPDATED - WDA
14	18/05/18	DRYING LAMP WIRE QTY UPDATED - WDA
15	13/07/20	WIRE COLOUR / SIZE CHANGE - WDA

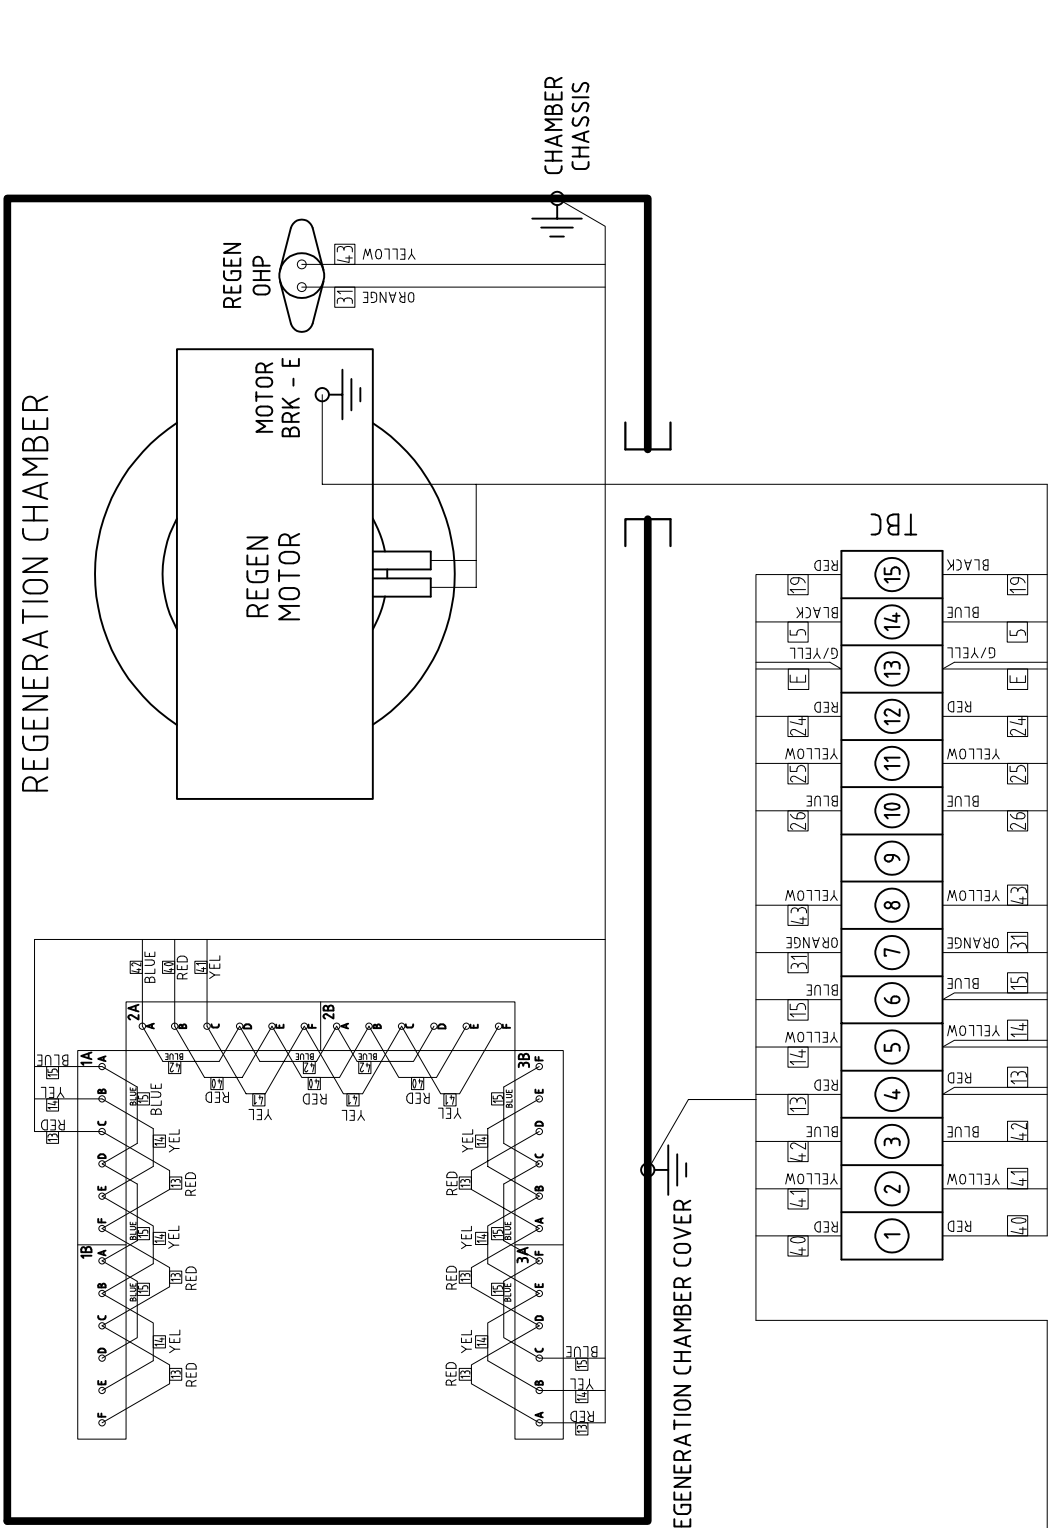



© 1993  
LIMITED  
BISHOP AUCKLAND  
ENGLAND

**TITLE**  
DD900 - WIRING DIAGRAM - 220V / 60Hz


**MATERIAL**  
N/A

**FINISH**  
N/A

**DIMENSIONS IN m.m.**  
TOLERANCES UNLESS  
OTHERWISE STATED

0.0 ± 1  
0.00 ± 0.25  
0.00 ± 0.05  
ANGULAR ± 0.5 DEGREE

**3RD ANGLE PROJECTION**



DO NOT SCALE  
IF IN DOUBT ASK

**DRAWN:** W DAGLISH


**CAD SCALE:** N/A

**DRG.NO.**  
5010324

**SHEET**  
2 OF 2


ISSUE	DATE	AMENDMENTS
1	26/02/16	ORIGINAL
2	23/03/16	DIGITAL STAT CORRECTED - WDA

**HUMIDISTAT 3035157**

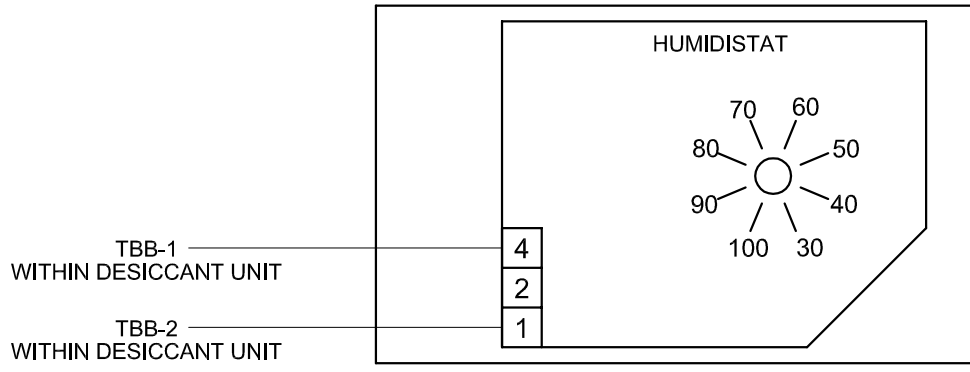


FROM	TERM.	TO	TERM.
H/STAT - 1	PLAIN	TBB-1	SOLDER
H/STAT - 4	PLAIN	TBB-2	SOLDER

- HUMIDISTAT 3035159 - 230V (INTERNAL SENSOR)
- HUMIDISTAT 3035160 - 115V (INTERNAL SENSOR)
- HUMIDISTAT 3035161 - 230V (EXTERNAL SENSOR)
- HUMIDISTAT 3035162 - 115V (EXTERNAL SENSOR)

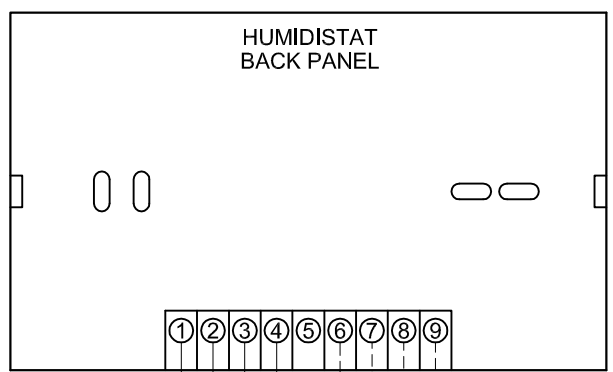

**NOTE**  
ON ALL VERSIONS OF THIS HUMIDISTAT DIP SWITCH 3 MUST BE IN THE 'ON' POSITION. THE DIP SWITCH PANEL IS LOCATED IN THE TOP LEFT CORNER WITHIN THE FRONT PANEL OF THE HUMIDISTAT.

HUMIDISTAT SENSOR  
(3035161 / 3035162 ONLY)

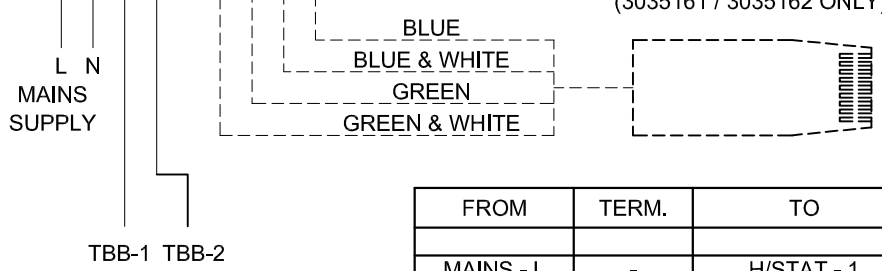

FROM	TERM.	TO	TERM.
MAINS - L	-	H/STAT - 1	PLAIN
MAINS - N	-	H/STAT - 2	PLAIN
H/STAT - 3	PLAIN	TBB-1	SOLDER
H/STAT - 4	PLAIN	TBB-2	SOLDER
H/STAT - 6	PLAIN	SENSOR-GR/WH	-
H/STAT - 7	PLAIN	SENSOR-GR	-
H/STAT - 8	PLAIN	PLUG - BL/WH	-
H/STAT - 9	PLAIN	PLUG - BL	-

**Ebac** LIMITED BISHOP AUCKLAND ENGLAND

TITLE **DESICCANT - REMOTE H/STAT WIRING**

3RD ANGLE PROJECTION  
DO NOT SCALE IF IN DOUBT ASK

DIMENSIONS IN m.m. TOLERANCES UNLESS OTHERWISE STATED  
 O. ± 1  
 O.O ± 0.25  
 O.OO ± 0.05  
 ANGULAR ± 0.5 DEGREE

MATERIAL **N/A**  
 FINISH **N/A**

DRAWN: W. DAGLISH  
 CAD SCALE: N/A  
 DRG.NO. **5010320**  
 SHEET 1 OF 1



Drawing	: - TPC 387
Issue	: - 14
Date	: - 21/08/20

### **UK Head Office**

Ebac Industrial Products Ltd  
St Helens Trading Estate  
Bishop Auckland  
County Durham  
DL14 9AD

Tel: +44 (0) 1388 664400  
Fax: +44 (0) 1388 662590

[www.eipl.co.uk](http://www.eipl.co.uk)  
[sales@eipl.co.uk](mailto:sales@eipl.co.uk)

### **American Sales Office**

Ebac Industrial Products Inc  
700 Thimble Shoals Blvd.  
Suite 109, Newport News  
Virginia, 23606-2575  
USA

Tel: +01 757 873 6800  
Fax: +01 757 873 3632

[www.ebacusa.com](http://www.ebacusa.com)  
[sales@ebacusa.com](mailto:sales@ebacusa.com)

### **German Sales Office**

Ebac Industrial Products Ltd.  
Gartenfelder Str. 29-37  
Gebäude 35  
D-13599, Berlin  
Germany

Tel: +49 3043 557241  
Fax: +49 3043 557240

[www.eip-ltd.de](http://www.eip-ltd.de)  
[sales@eip-ltd.de](mailto:sales@eip-ltd.de)